


This drive has a jumper block of 6 pins, located between the power connector and the IDE interface connector.

5	3	1
6	4	2

Designation	Jumper	
Master (only drive)	all removed	(default)
Master (with slave)	5-6	
Slave	3-4	
Slave, with Conner as Master drive	1-2, 3-4	

Note: For use with a 25-1095 adapter use master (only drive) jumper setting.

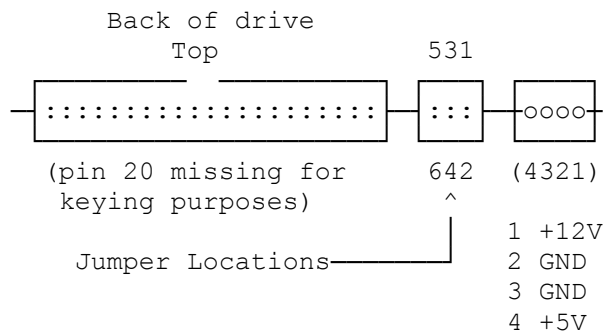

(rjs-06/11/93)